

# **HANDY HEATER®**

**FREEDOM**



## **Product Guide**

**SAVE THESE INSTRUCTIONS**



**READ ENTIRE MANUAL BEFORE USE**

## **Congratulations!**

 
Thank you for your purchase of Handy Heater® Freedom. This powerful, wearable heater has advanced technology to gently warm the back of your neck and shoulders on even the coldest days. Simply adjust the product around your neck and enjoy instant warmth...anywhere!

**[www.HHFreedomFAQ.com](http://www.HHFreedomFAQ.com)**

If you can't find the answer or do not have access to the internet, call our customer service line Monday-Friday 9am to 6pm EST:

**1-877-874-9309**

### **WHAT'S INCLUDED:**

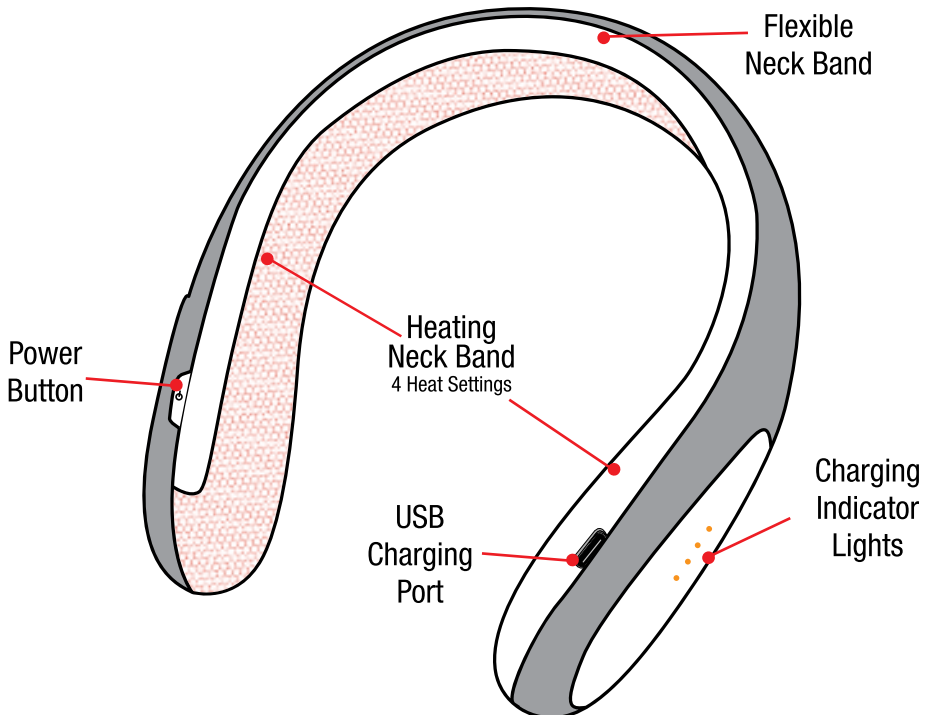


## CHARGING THE BATTERY:


Handy Heater® Freedom comes partially charged – For best results, fully charge battery before first use.

NOTE: When fully charged, you can expect runtime of 3-6 hours depending on heat setting.

 
1. Using included USB cable, plug small end into charging port located on side of unit.

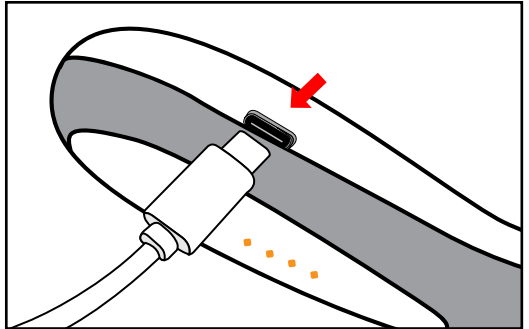

 2. Plug large end of USB cable into a USB-Power adapter, laptop, or other device (not included).

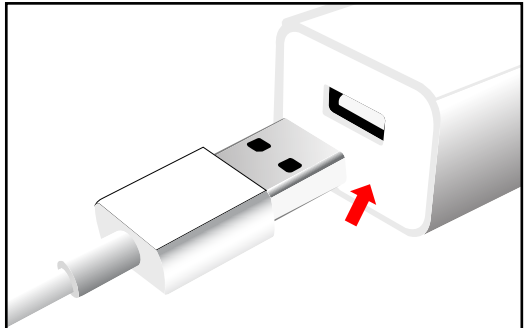


 3. Indicator lights will begin blinking to show that the unit is charging. When all four indicator lights remain solid, Handy Heater® Freedom is fully charged.

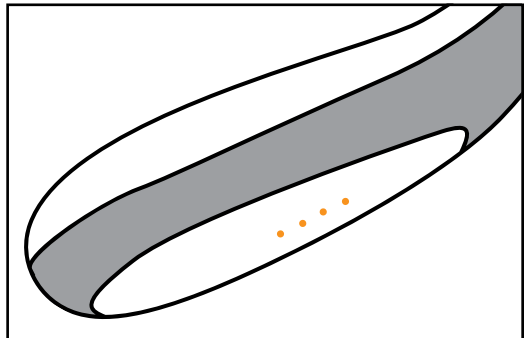


## USAGE:

 1. Place Handy Heater® Freedom around your neck.

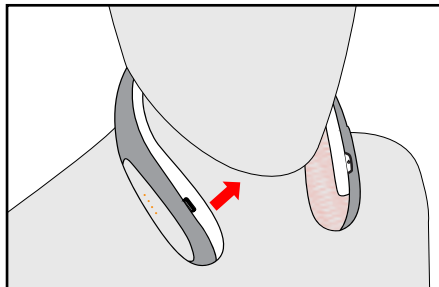

2. Press the power button located on the side to turn on – indicator lights will glow to show the unit has power.

 *NOTE:* Heat setting will default to HIGH upon turning on. With each press of the button, the unit will lower its temperature. There are 4 heat settings.

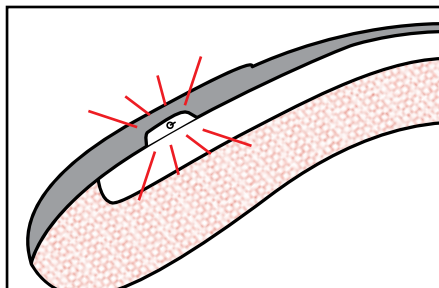

3. When done, press power button until unit turns off. Store in a cool, dry location until next use.

## MAINTENANCE:

When not in use, be sure to store your Handy Heater® Freedom in a cool, dry place.

Spot clean as needed with a non-abrasive cloth.

## **WARNINGS:**

- DO NOT allow any liquid to get inside Handy Heater® Freedom. Do not submerge in any liquid.
- DO NOT expose Handy Heater® Freedom to a wet or damp area. Use only in dry locations.
- DO NOT attempt to remove or replace the included battery.
- DO NOT place near open flames or fire sources.
- DO NOT use solvents or alcohols for cleaning Handy Heater® Freedom.
- Only use the original power cord supplied in package.
- DO NOT allow any foreign objects inside Handy Heater® Freedom.
- Always turn unit off when not in use.
- DO NOT use the unit if the plug appears defective, product malfunctions, unit has been dropped, or damaged in any manner. Discard product or return to authorized service facility for examination and/or repair.
- The manufacturer does not bear any responsibility for any damage from failure to comply with this product guide.

ONTEL® ASSUMES NO RESPONSIBILITY FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF YOUR USE OF THE PRODUCT. IN PURCHASING AND USING THIS PRODUCT, YOU ASSUME ALL RESPONSIBILITY FOR CLEANING THE PRODUCT AND MONITORING THE PRODUCT FOR MOLD. ADDITIONALLY, ONTEL® SPECIFICALLY DISCLAIMS ALL EXPRESSED WARRANTIES NOT OTHERWISE SET FORTH HEREIN AND ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION OF THE FACE HEREOF.

**FOR HOUSEHOLD USE ONLY**

# HANDY HEATER®

## FREEDOM



Distributed by

©2022 Ontel Products Corp.  
Fairfield, NJ 07004  
All Rights Reserved.

Made In China  
Patent Pending.

Model Number: 18009  
AC100~120V  
DC 5V , 1.5-2.0A  
1217.0101

HHF-IM-01-0622-200